 




Canon Powershot SD880 Top Panel Replacement

Written By: Robert Manno

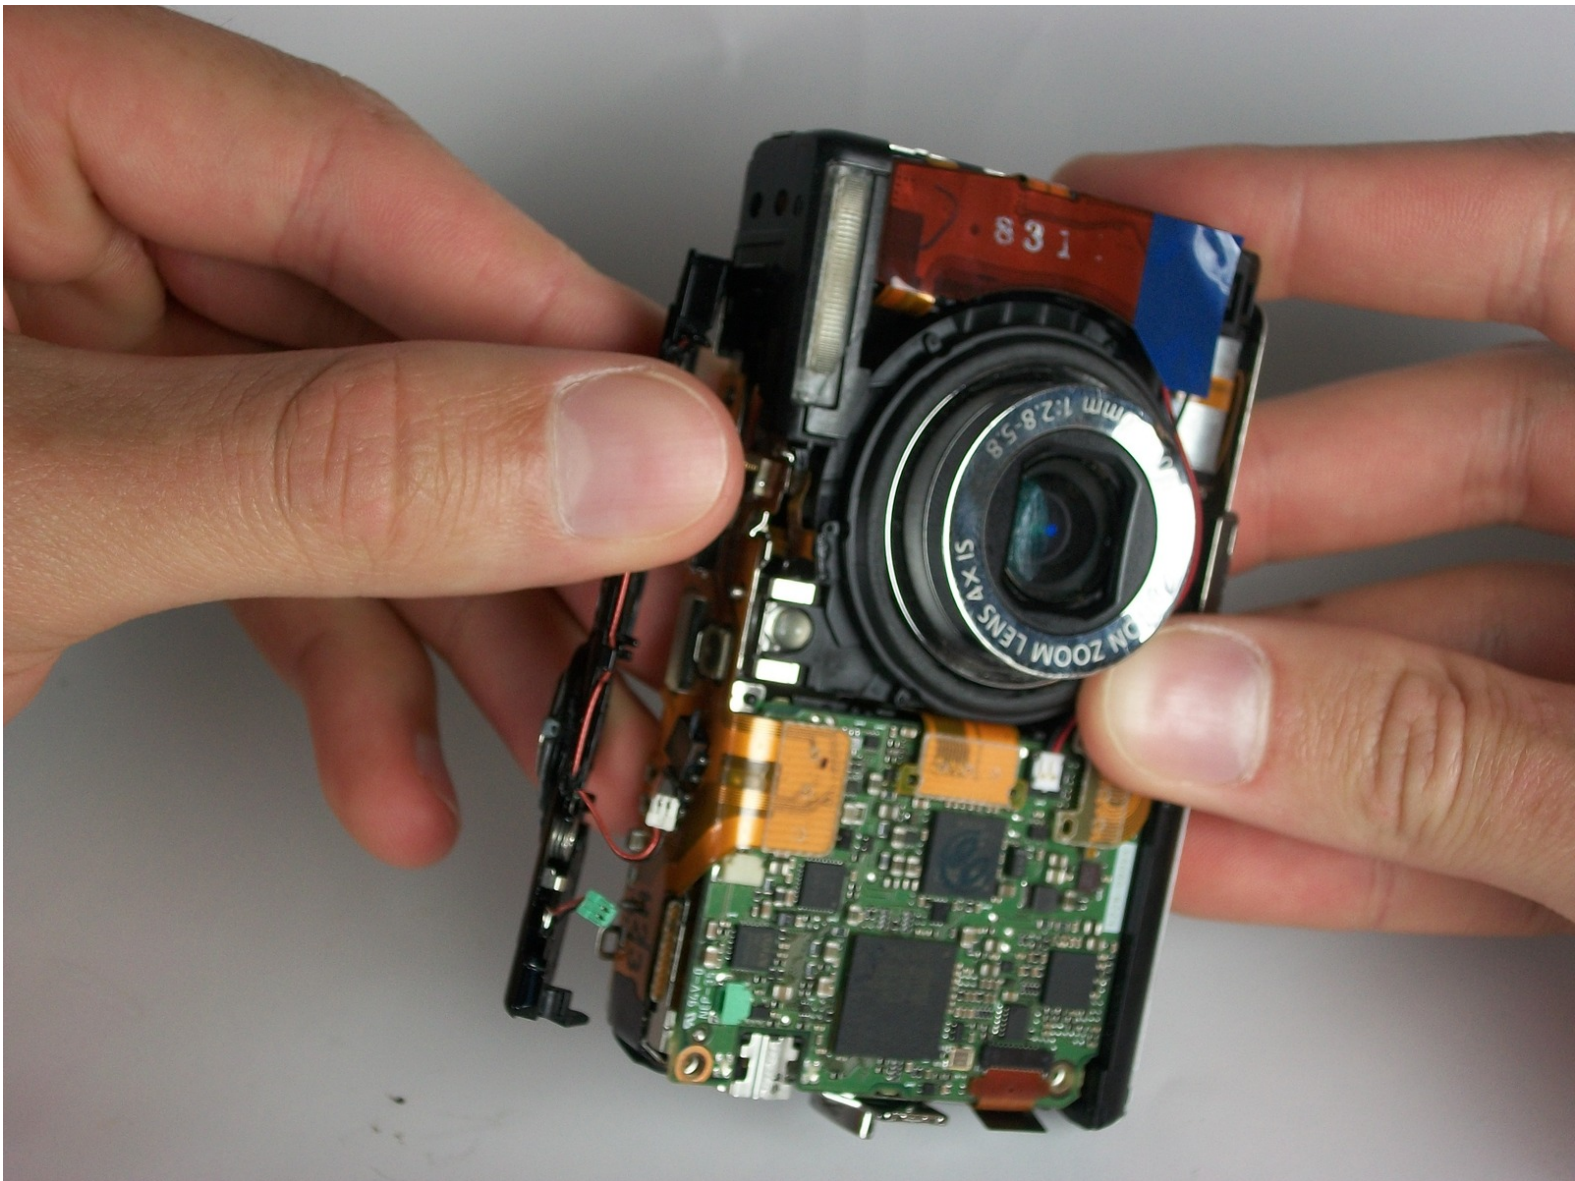




TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Cover Removal

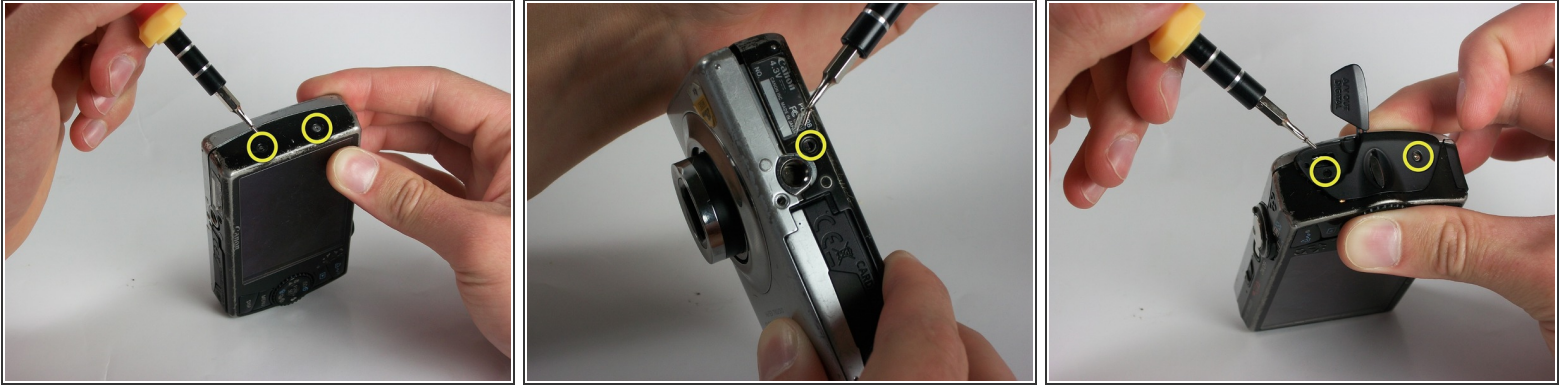

- Remove the 2 screws(2.41mm long) on the side of the camera next to the LCD screen.
- Remove the 2 screws(4.08mm) on the other side. One is located under the rubber USB flap.
- Remove the last screw(2.59mm) located on the bottom of the camera.
- Slowly pull the back cover of the camera.

 Step 2 — Top Panel

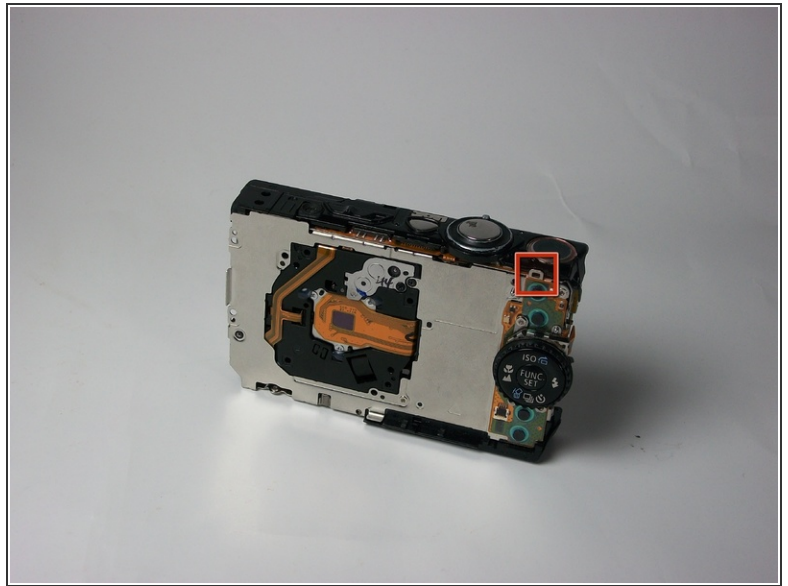

- Unplug the green (if color-blind please ask someone for assistance) and white plugs connecting the top panel to top of the logic board.
- Dislodge the tab above the lens.
- Dislodge the back tab.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-12 05:37:35 AM.